



[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#)


KODAK DC240/DC280 Zoom Digital Camera User's Guide

© Eastman Kodak Company, 1999

Kodak and Photolife are trademarks of Eastman Kodak Company.

Table of Contents

 - [Camera Identification](#)
- [Getting Started](#)
 - [Preparing to Take Pictures](#)
 - [Loading Batteries](#)
 - [Turning the Camera On and Off](#)
 - [Checking Batteries](#)
 - [Using the Battery Charger](#)
 - [Using an AC Adapter](#)
 - [Inserting a Camera Memory Card](#)
 - [Removing a Camera Memory Card](#)
 - [Setting the Clock on Your Camera](#)
 - [Adjusting the LCD Brightness](#)
- [Taking Pictures](#)
 - [Previewing a Picture Before it is Taken](#)
 - [Pressing the Shutter Button](#)
 - [Zooming in on Your Subject](#)
 - [Zooming in Even Closer](#)
 - [Viewing the Picture Just Taken](#)
 - [Setting a Quickview for Each Picture](#)
 - [Setting the Flash](#)
 - [Photographing Distant Subjects](#)
 - [Photographing Close-Ups](#)
 - [Putting Yourself in the Picture](#)
 - [Adding the Date to Your Pictures](#)
 - [Deleting the Picture Just Taken](#)
- [Customizing Your Pictures](#)
 - [Adjusting the Camera Exposure](#)
 - [Adding a Border to Your Picture](#)
 - [Capturing in Black-and-White, Sepia Tone, or Document](#)
 - [Adjusting the Picture Quality](#)
 - [Adjusting the Picture Resolution](#)
 - [Selecting a White Balance for Indoor Pictures](#)
 - [Choosing a Metering System](#)
 - [Adjusting the ISO Setting \(DC280 only\)](#)
 - [Sharpening and Softening a Picture](#)
 - [Locking in an Exposure Setting](#)
- [Reviewing Your Pictures](#)
 - [Viewing Your Pictures](#)
 - [Magnifying Your Pictures](#)
 - [Selecting Pictures for Printing](#)

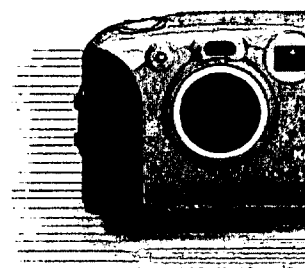

- [Cancelling Pictures for Printing](#)
 - [Protecting Your Pictures](#)
 - [Deleting One or All of Your Pictures](#)
 - [Running a Slide Show on Your Television](#)
 - [Viewing Information About a Picture](#)
- [Personalizing Your Camera](#)
 - [Setting a Response Beep](#)
 - [Saving Camera Power](#)
 - [Viewing Camera Information](#)
 - [Selecting a Language for the Camera](#)
 - [Formatting Your Camera Memory Card](#)
 - [Adjusting the Video Out Signal](#)
 - [Adjusting the Camera Default Settings](#)
 - [Setting a Border Default](#)
 - [Setting a Flash Default](#)
 - [Setting a White Balance Default](#)
 - [Setting an Exposure Compensation Default](#)
 - [Setting an Effect Default](#)
 - [Setting an Auto ISO Default \(DC280 only\)](#)
- [Installing Your Software](#)
 - [WINDOWS Computer System Requirements](#)
 - [MACINTOSH Computer System Requirements](#)
 - [KODAK Software for WINDOWS Computers](#)
 - [KODAK Software for MACINTOSH Computers](#)
 - [Installing the Software](#)
- [Connecting Your Camera](#)
 - [Using a Serial Cable Connection - WINDOWS Computers](#)
 - [Using a Serial Cable Connection - MACINTOSH Computers](#)
 - [Using a USB Cable Connection](#)
 - [Starting the KODAK Software for WINDOWS Computers](#)
 - [Starting the KODAK Software for MACINTOSH Computers](#)
 - [Navigating to Your Pictures](#)
- [Tips](#)
 - [Connecting with Your Camera](#)
 - [Communicating with the Computer](#)
 - [Adjusting Your Monitor for Better Viewing](#)
 - [Getting Better Results from Your Printer](#)
- [Troubleshooting](#)
- [Where to Get Help](#)
 - [Software Help](#)
 - [Faxed Information](#)
 - [Customer Support](#)
- [Original Camera Default Settings](#)
- [Specifications - DC240](#)
- [Specifications - DC280](#)
- [General Maintenance and Safety](#)
- [Using Your Batteries](#)
- [Regulatory Information](#)


[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)




[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#) | [Owner's Manual Contents](#)

KODAK DC240/DC280 Zoom Digital Camera User's Guide Camera Identification

 
Camera Front

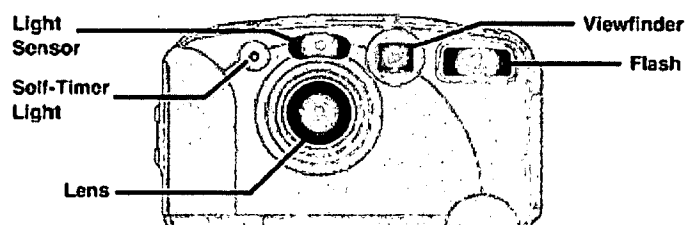


Camera Top

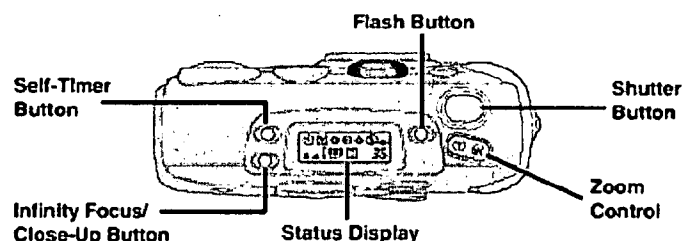 


Status Display

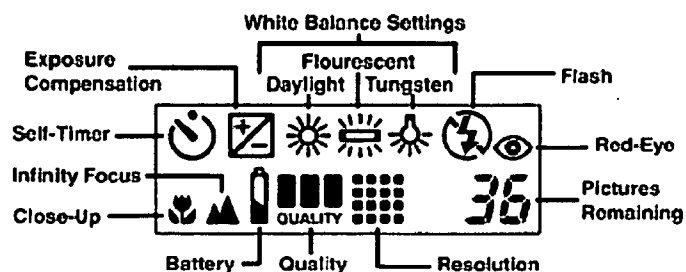 


Camera Back

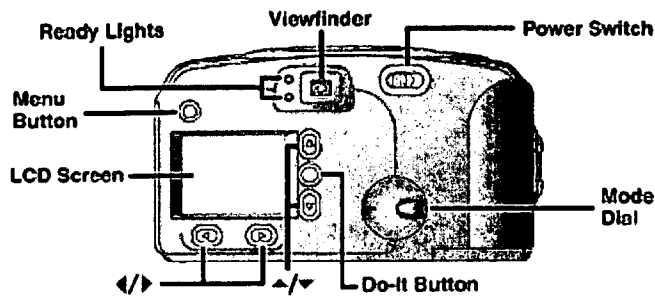 

Camera Bottom

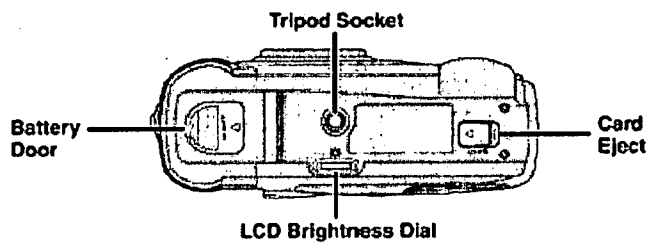 

Camera Side

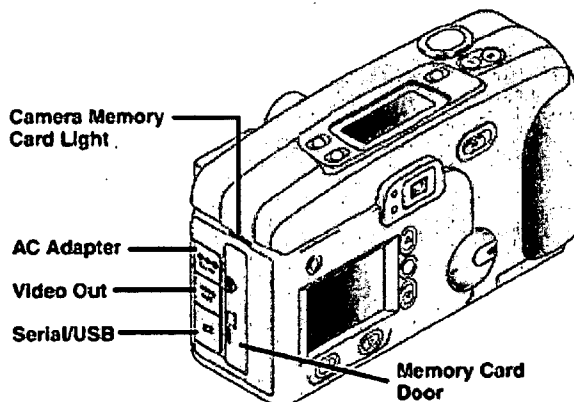 

Owner's Manual Contents

[Main Table of Contents](#)

[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)

TAKE PICTURES. FURTHER.™

Service & Support
[Service & Support Main](#) | [DC240 Support](#) | [DC280 Support](#) | [Owner's Manual Contents](#)
KODAK DC240/DC280 Zoom Digital Camera
User's Guide
DC280 Specifications

DC280 Camera		
Pixel Resolution	CCD	1901 x 1212 = 2.3 millions of pixels (total number of pixels)
	High	1760 x 1168=2,055,680
	Standard	896 x 592=530,432
Color		24-bit, millions of colors
Picture File Format		Exif version 2.1 (JPEG base)
Picture Storage		External memory only: ATA compatible CompactFlash card
Viewfinder		Real image
ASA/ISO Sensitivity		70
Flash Range	Wide	1.6 ft to 9.8 ft (0.5 to 3.0 m)
	TelePhoto	1.6 ft to 7.9 ft (0.5 to 2.4 m)
Lens	Type	Optical quality glass
	Maximum Aperture	Wide: F/3 TelePhoto: F/3.8
	Zoom	6X: 2X Optical zoom 3X Digital zoom
	Focal Length	30 to 60 mm (equivalent to 35 mm camera) 6.5 to 13 mm (actual)
	Focus Distance	Wide/TelePhoto: 1.6 ft (0.5 m) to infinity Close-Up: 0.82 ft (0.25 m) to 1.6 ft (0.5 m)
Power	Batteries	AA size 1.5-volt alkaline, or AA size 1.2-volt Ni-MH rechargeable
	DC Input	AC adapter specified by Kodak
Tripod Socket		.25 in. (.006 m) threaded
Video Out		NTSC or PAL
Dimensions	Width	5.2 in. (133 mm)
	Length	2.0 in. (52 mm)
	Height	3.0 in. (76 mm)
Weight		12.1 oz (342 g) without batteries

Operating Temperature

32 to 104° F (0 to 40° C)

Owner's Manual Contents

[Main Table of Contents](#)

[Home](#) | [Privacy](#) | [Site Terms \(Mar 2007\)](#) | [Investor Center](#)